Wireless Router	I.Hardware Connection Please connect wired network as shown in the figure for the first-time configuration. ADSL users please follow steps 1,2,3,4 and LAN users please follow steps 2,3,4,directly connect network cable to router WAN port.	II.Computer settings IP setting please refer to the steps below if computer connect router via wired network. Settings for Windows 7/Vista OS:	Settings for Windows 2000/XP OS: 1.Right click "My network places", choose "Properties".	III.Basic configuration of router 1.Please login on mainstream browser like Firefox,IE9,Google etc. Input 192.168.5.1,enter User name: root,Password: admin, click "LOGIN".
Installation Guide	ADSL access WAN ((())) ((())) Optical fiber / Modem LAN access Network	1.Click"Start"-> Control Panel -> Network and Sharing Center -> Change adapter settings -> Local Area connection, click"Local Area connection", choose"Properties".	2. Right click "Local Area Connection", choose "Properties" -> double click "Internet Protocol (TCP/IP)" as pic:	Please eter the administrator passwood for the route: The more measurement parent of during the administrator the roud place theory if in time. Modify put types that a - Administrator Preserved with the measurement of the route of the ro
	After connection finished,please check the indicator status:	2.Double click "Internet Protocol Version 4 (TCP/IPv4)".	3.Double click "Internet Protocol Version 4 (TCP/IPv4)".	Conception C
	1 2 3 4 LAN Bright Blue LAN port connected properly Ø WAN Bright Blue Wan port connected properly Image: State of the USB (when insert the USB adapter) Bright Blue USB (adapter connected properly Image: State of the USB adapter) Bright Blue USB adapter connected properly Image: State of the USB adapter) Bright Blue USB adapter connected properly Image: State of USB adapter of USB adapter connected properly Image: State of USB adapter connected properly Image: State of USB adapter of USB adapter of USB adapter connected properly Image: State of USB adapter connected properly Image: State of USB adapter of USB adapter of USB adapter of USB adapter connected properly Image: State of USB adapter connected properly Image: State of USB adapter of USB adapter of USB adapter of USB adapter connected properly Image: State of USB adapter connected properly Image: State of USB adapter of USB adapter of USB adapter connected properly Image: State of USB adapter connected properly Image: State of USB adapter of USB adapter connected properly Image: State of USB adapter connected properly Image: State of USB adapter connected properly Image: State of USB adapter connected properly Image: State of USB adapter connected properly Image: State of USB adapter connected properly	3.Choose "Obtain an IP address automatically" and "Obtain DNS server address automatically". Click "OK".	4. Choose "Obtain an IP address automatically" and "Obtain DNS server address automatically", Click "OK".	A:If WAN port directly connect with upper router LAN port, WAN Protocol please choose"Dynamic IP(DHCP)", then click "SAVE & APPLY" button.
B:If internet access via ADSL, please choose "PPPoE dial up internet access", input broadband User name and Password, then click"SAVE & APPLY".	2.Find the hotspot from list and Click "JOIN THE NETWORK". If hotspot is not found, please rescan.	5.Now the signal strength can be found on the setting page. Click "Network parameters" ->"Interface parameter", if wwan had obtained the IP address, the internet is available.	3. Do NOT tick the "Client and relay selection", just Input password or leave it blank if no password, then click "SUBMIT".	6.Click "Network parameters" ->"Interface parameter", if wwan had obtained the IP address, the internet is available.
WAN port setup WAN protocol PPPoE dial up internet access.	Just the wireless network: search for wireless Monoch? Monoch? Monoch? Monoch? Monoch? Monoch Wireless Network (Monoch March 1996) Monoch March 1996) Monoch March 1996 Monoch 1997 Monoch 1996 Monoch 1997 Monoch 1997 Monoc		Join the wireless network: settings Client and relay selection © Keep the hook as the client mode, that is, when the net transmitting signal at the same time WPA key © Please enter the password to connect to the wretees of 4.Keep the other parameter default, click "SAVE & APPLY"	Non-section Non-section Image: Section Sec
 (For router with usb interface only) (Note: The router currently support usb adapter with RT3070, RT3072, RTL8188RU and RTL8811 chipsets and support to repeated SSID name in English only.) 1.In any cases, please do insert the WiFi usb adapter first before power the router. Or else, the WiFi usb adapter can't be recognized, and the previous connection record will be cleared. After router boots on, enter the configuration page, click 	Client and relay selection. The NIC only supports the client mode (Client) With key Prease miter the password to connect to the whites mate. Interface name of the new related. Prease use different interface names. RTI3070 uses ward; (RTI1000 please use ward; if not subm Create / Assign firewait-zone o as in the new 4.Do not change any router parameter here, click "SAVE &	1.Click "Wireless Setting", then click "SEARCH SIGNAL" button Weiers state Trade Wirks Manage 63:13bg (ndf) Trade Wirks Manage 63:13bg (ndf	button	(Note: Repeat with External WiFi usb adapter doesn't need to remove old signal, just rescan and connect the new one.)
"Wireless Setting" on side menu.If the WiFi usb adapter loaded successfully, the page below will be found, click the second "SEARCH SIGNAL" button.	4. Do not change any router parameter nere, click "SAVE & APPLY" button.	2.Find the hotspot from list and Click "JOIN THE NETWORK".	5.Now the signal strength can be found on the setting page.	Tuestin MTLBB1(1/2)A Windess Card 802.11 Adgress (Histol) VI.Reset Router 1. When router is power on proces reset button on router for 8
Tuddi Winista Manager 60.11 bigs (m) Extra strategy ************************************	Lised lag Marriel	Join the windess network: search for windess Join the windess network: search for windess Lip Concert F/R Join the lip Concert F/R Join the lip Concert F/R Lip Concert F/R Join the lip Concert F/R Join the lip Concert F/R Lip Concert F/R Join the lip Concert F/R Join the lip Concert F/R Lip Concert F/R Join the lip Concert F/R Join the lip Concert F/R Lip Concert F/R Join the lip Concert F/R Join the lip Concert F/R Lip Concert F/R Join the lip Concert F/R Join the lip Concert F/R Lip Concert F/R Join the lip Concert F/R Join the lip Concert F/R Lip Concert F/R Join the lip Concert F/R Join the lip Concert F/R	Wireless status Image: Status	 When router is power-on, press reset button on router for 8- 10 seconds then release. When all leds on router light up means reset finished. The router will reboot automatically. Click "Backup/ Firmware "on side menu , click "SYSTEM RECOVERY" button. It takes about one minute to reset.